BODYGUARD®
COMPOSITES

MI-LIN930GRY RAM PROMASTER CITY WALL LINER INSTALLATION GUIDE

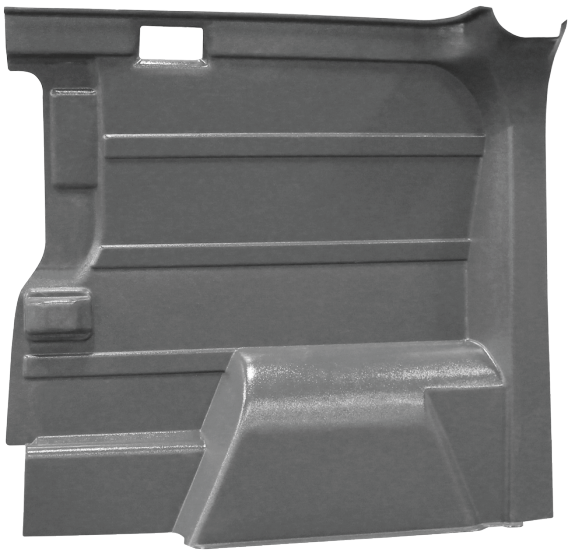

BODYGUARD®
COMPOSITES

On behalf of Bodyguard and Malley Industries, congratulations and thank you for purchasing our interior van products.

Malley Industries is one of North America's premiere manufacturers of ambulances, patient transfer units and mobility vehicles. Bodyguard composite interiors are in all of these vans because they are rugged, safe, and easy-to-clean.

Bodyguard Composites products follow Malley's strict manufacturing process controls. With tens of thousands of our products in commercial and emergency vehicles throughout North America, Bodyguard's noise-reducing, lightweight interior products will provide years of protection while improving the fuel efficiency of your van.

Terry Malley

President & CEO

BODYGUARD®
COMPOSITES

MI-LIN930GRY			
	QTY	DESCRIPTION	
	1	DRIVER SIDE PANEL	
	1	PASSENGER SIDE PANEL	
A	20	3/4” SELF-TAPPING SCREWS	
B	20	WASHERS FOR SELF-TAPPING SCREWS	
C	20	COVERS FOR SELF-TAPPING SCREWS	

SUGGESTED TOOLS: CORDLESS DRILL AND CLAW HAMMER

A (PART #31051)
3/4” Self-Tapping Screws

B (PART #45-13715)
Washers

C (PART ##45-10664)
Covers

Ensure you have all required hardware and equipment prior to beginning installation.

WARNING: PRIOR TO DRILLING INTO THE VEHICLE, CHECK BEHIND DRILLING LOCATIONS FOR ELECTRICAL WIRES, FUEL/BRAKE LINES, AND OTHER CRITICAL COMPONENTS. ADJUST THE DRILLING LOCATIONS TO ENSURE THAT YOU AVOID CONTACT WITH THESE COMPONENTS. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY OR DEATH, AND CAUSE SEVERE DAMAGE TO THE VEHICLE’S FUNCTIONALITY.

Disconnect the driver side rear outlet and cover.

Slide the wall panel through the rear door and put into place.

Reconnect the rear outlet and snap the cover into place on the liner.

Adjust the weatherstripping so it fits over the liner.

Using the provided self-tapping screws (**A**), washers (**B**), and caps (**C**), secure the panels to the wall.

Installation is complete.