BODYGUARD® COMPOSITES

RIV NUT (PLUS NUT) INSTALLATION GUIDE

INCLUDED:

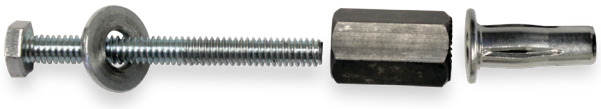

SUGGESTED TOOLS:

9/16" WRENCH
DRILL
11//32" DRILL BIT
EITHER A 7/16" NUT DRIVER **OR** A 7/16" WRENCH

Mark the holes for installation for your Partition or Wall Liners.

Drill the holes with the 11/32" drill bit.

Insert the assembly into the drilled hole. Use a 9/16th wrench to hold the Riv Nut housing, using the 7/16" nut driver, turn the bolt clockwise to compress the Riv Nut / Plus Nut.

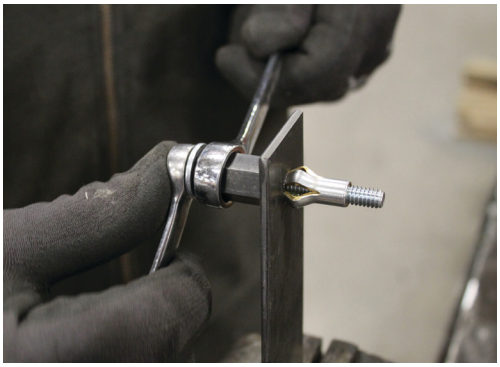

Step 3 can also be accomplished by using a 9/16" wrench if a nut driver is unavailable.

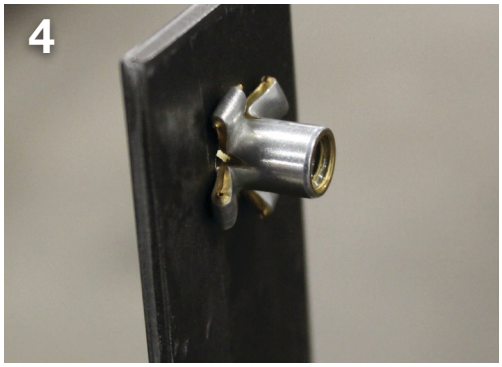

Reverse the driver or wrench to turn the assembly counter clockwise, leaving the expanded Riv Nut housing in the hole.

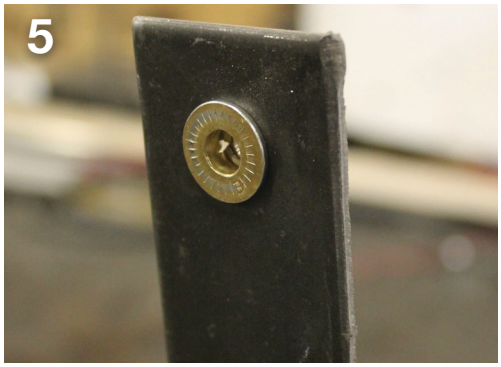

Installation is complete.

Ensure you have all required hardware and equipment prior to beginning installation.

WARNING: PRIOR TO DRILLING INTO THE VEHICLE, CHECK BEHIND DRILLING LOCATIONS FOR ELECTRICAL WIRES, FUEL/BRAKE LINES, AND OTHER CRITICAL COMPONENTS. ADJUST THE DRILLING LOCATIONS TO ENSURE THAT YOU AVOID CONTACT WITH THESE COMPONENTS. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY OR DEATH, AND CAUSE SEVERE DAMAGE TO THE VEHICLE'S FUNCTIONALITY.